PREMIER®

MANUAL DE INSTRUCCIONES
PIZZERA ELÉCTRICA
ED-3690

ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ÍNDICE

INSTRUCCIONES DE SEGURIDAD 2
INSTRUCCIONES DE OPERACIÓN 2
RECOMENDACIONES 2
REGULADOR AUTOMÁTICO DE TEMPERATURA 3
LIMPIEZA 3
DIAGRAMA DE CIRCUITOS 3

PRECAUCIÓN

RIESGO DE CHOQUE ELÉCTRICO , NO ABRA

Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.

Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.

Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Colombia:	01-900-331-PEJC (7352)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

⚠INSTRUCCIONES DE SEGURIDAD

- No toque la superficie caliente. Utilice las manijas de la unidad.
- Para evitar el riesgo de electrocución verifique el buen estado del cable y el enchufe con frecuencia. No utilice la unidad si observa fallas en estos.
- Mantenga una estricta supervisión de los niños en caso de que se encuentren cerca de la unidad.
- No introduzca la unidad o el cable de poder en agua u otros líquidos.
- No utilice partes o accesorios no recomendados por el fabricante.
- No utilice la unidad cerca de fuentes de calor.
- Permita que la unidad se enfríe por completo antes de transportarla o limpiarla.
- Coloque el regulador en la temperatura deseada antes de conectar la unidad.
- Utilice la unidad únicamente para el propósito para el que fue diseñada.
- No doble el cable de poder ni lo deje muy tirante.
- Mantenga un espacio libre de 15 cm alrededor de la unidad para ventilación.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico calificado.

INSTRUCCIONES DE OPERACIÓN

1. Coloque el selector de temperatura en la posición de apagado y luego conecte el regulador.
2. Conecte el cable de poder en un tomacorriente adecuado con polo a tierra y corriente de 220V.
3. Ajuste la temperatura de acuerdo con el tipo de alimento. La luz indicadora se enciendo mostrando que la unidad está encendida.

COCCIÓN

1. Una vez que la unidad esté encendida, espere de 5 a 10 minutos. Una vez que la luz indicadora se apague puede comenzar a cocinar.
2. Si la comida está completamente lista, puede mantener la temperatura colocando el regulador en “mantener caliente”.

- Si observa que la luz indicadora se apaga, esto no es un error. Significa que el regulador automático de temperatura está en funcionamiento.
- Si escucha ruidos, puede deberse a la placa de calefacción que se expande al calentarse.

DESPUÉS DE UTILIZARLA

1. Al terminar coloque el regulador de temperatura en la posición de apagado.
2. Desconecte el cable del tomacorriente y retire el regulador de la unidad. Permita que la unidad se enfríe antes de hacerlo para evitar quemarse.
3. Una vez la unidad esté fría puede proceder a limpiarla con una prenda seca y suave.

RECOMENDACIONES

La superficie calefactora es anti-adherente. Por lo tanto, tenga en cuenta lo siguiente:

- No utilice objetos puntiagudos hechos de metal.
- No utilice cuchillos para cortar los alimentos sobre la superficie.
- No coloque el regulador de temperatura automático sobre una placa caliente.
- No utilice limpiadores químicos abrasivos o cepillos de metal para limpiar la unidad.
- Limpie la placa con una prenda húmeda suave.

REGULADOR AUTOMÁTICO DE TEMPERATURA

- El regulador automático de temperatura es un dispositivo delicado y por lo tanto debe ser tratado cuidadosamente y prevenir que se golpee o se caiga.
- Utilice únicamente el regulador que acompaña a esta unidad.
- Retire el regulador del conector y no del cable.
- Si observa que el regulador está dañado, no utilice la unidad y haga que se revise.
- Antes de colocar o retirar el regulador asegúrese de que esté en posición apagada.

LIMPIEZA

- Limpie la superficie calefactora con una toalla o papel húmedo mientras la unidad está tibia para retirar más fácilmente los residuos de alimentos. Si es muy difícil limpiarlos agregue un poco de agua y encienda la unidad. La placa se calentará y será más sencillo limpiar. No utilice detergente, cepillos de metal, etc., ya que rayan la superficie. No introduzca la placa en agua cuando esté caliente.
- Limpie los bordes de la unidad con la mano para evitar que los residuos de alimentos ingresen a la placa de calefacción. Recuerde que la unidad debe estar fría.
- La tapa puede ser limpiada con una esponja y un poco de detergente. No utilice tiner, alcohol o benzina.
- El regulador de temperatura automático puede ser limpiado con papel suave y seco.
- Al terminar de limpiar la unidad, séquela por completo con una toalla suave. Después puede agregar un poco de aceite de cocina sobre la placa de calefacción.

DIAGRAMA DE CIRCUITOS

Voltaje AC 220V/50Hz
Potencia 1500W

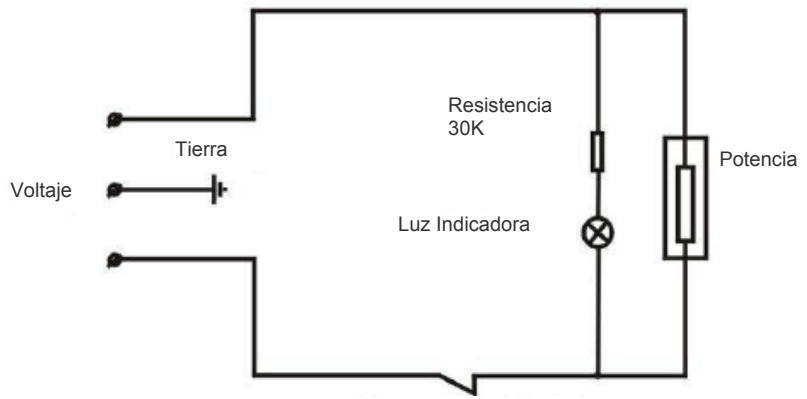

PREMIER®

INSTRUCTION MANUAL
PIZZA PAN
ED-3690

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.
If you need extra support, please write to ***info@premiermundo.com***

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for costumers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Colombia:	01-900-331-PEJC (7352)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

General safety instructions

USING ELECTRICAL APPLIANCE YOU MUST ACT IN COMPLIANCE WITH THE FOLLOWING INSTRUCTIONS

- Read the instructions carefully before use.
- Never touch the hot surface; only use the handles.
- To avoid an electrical shock, check the appliance regularly for damages to the appliance, the cable or plug. If damages are found, do not use the appliance b bring it in for repair to a qualified technician.
- Take extra care in the presence of children; never leave the working appliance with children without supervision.
- Never immerge the appliance, cable or plug into water or any other liquid.
- Do not use any parts that are not delivered with the original pan; this might cause danger.
- Never place the appliance on or near a hot plate or any other heating object, explosive or gas.
- Never carry the appliance while still working: extra care must be taken if the pa contains hot oil or fat.
- Turn the regulator to the required temperature before you plug in.
- The appliance should only be used in domestic environment and for the use that it has been designed for.

THESE INSTRUCTIONS MUST BE FOLLOWED.

AUTOMATIC TEMPERATURE REGULATOR
THE RIGHT TEMPERATURE WILL BE KEPT AT THE SET TEMPERATURE

OPERATION INSTRUCTIONS

RIGHT CONSTRUCTION: BEFORE USING CLEAN THE HEAT PLATE AND COVER COMPLETELY

1). PUT THE TEMPERATURE SCALE TO "OFF" POSITION AND PUT THE AUTOMATIC TEMPERATURE REGULATOR IN THE INLET.

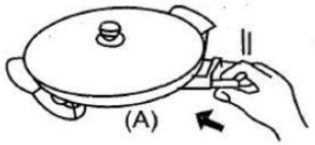

2). PUT THE PLUG INTO AN EARTHED 220V SOCKET

3).THE TEMPERATURE SCALE CAN BE SET IN ACCORDANCE WITH THE FOOD; THE CONTROL LAMP IS ON TO SHOW THE PAN IS HEATING.

COOKING

1). AFTER THE PAN HAS BEEN TURNED ON, WAIT 5-10 MINUTES,: AS SOON AS THE CONTROLLAMP WILL LIGHT, YOU CAN START COOKING.

2). IF THE FOOD IS COMPLETELY DONE, THE TEMPERATURE CAN BE KEPT BY PUTTING THE TEMPERATURE SCALE TO 'WARMKEEP'.

- If the lamp goes off, this is not an error, the automatic temperature regulator is in function.
- If there is some noise, this is not an error: the noise comes from the heater and the heat plate
- Do not put your hand under the reflector; do not put any inflammable material on the pizza pan.

3. after use

1) After use put the temperature scale to OFF

2) Pull the plug out of the socket, and then take out the automatic temperature regulator from the heat plate

Caution: Because the temperature leader of the temperature regulator is very hot after using the heat plate, let the heat plate cool down before pulling it out.

3) After cooling down, clean the temperature regulator with a dry and soft cloth.

Caution measures to be taken by operating the heat plate

The surface of the heat plate is non-stick, so take care as following:

- Do not use sharp objects made of metal.
- **Do not use a sharp knife to cut the food on the surface.**

- Do not put the automatic temperature regulator on the heat plate.
- It is not permitted to touch the heat plate.
- Do not use cleaner, nylon brush or metal brush, the surface of the heat plate would be damaged.
- The plate must be cleaned after using with a wet cloth. Food rests or fat on the surface will lead to fire

SAFETY MEASURES AND PROPOSALS

In order to avoid shock, fire or functions errors, the following caution measures must be followed.

- The power input must be 220V;
- The cable is not permitted to be curved and must be undamaged.
- Do not use the cable to pull the plug out of the socket.
- Do not immerge the heat plate into water.
- After cleaning, the appliance must be dry, and then you can re-use it.

The heat plate is not allowed to be used in the following places.

- On an unsteady place or on inflammables surface (newspaper, paper, pvc-tablecover carpet etc.)
- The hotplate must be min .15cms far from the wall or other objects.

THE AUTOMATIC TEMPERATURE REGULATOR

- The automatic temperature regulator is a high sensitive part, so handle with care; prevent falling or shock.
- Only use the automatic temperature regulator supplied with this appliance
- Insert the automatic temperature regulator in the right place. If you pull out the automatic temperature regulator, do not use the cable but use the connector of the automatic temperature regulator and pull it out.
- If the automatic temperature controller is damaged, stop using it; bring it in for repair by a qualified technician.
- Before inserting or pulling the automatic temperature controller, make sure it is in the OFF position and the plug is not in the supply socket.

CLEANING

CLEAN THE PAN AFTER USE AS FOLLOWS:

NAME	METHOD	REMARK
Heating plate	Clean the heating plate after use with a wet towel or soft paper, when it is still warm (not hot). If the residues are difficult to clean, put a little water on the plate and turn it. The plate will be heated and the residues can be rubbed away.	1. Do not use any detergent, nylon brush or metal brush; the heating plate will be damaged. 2. Do not put the heating plate into water when the heating plate is still hot.
Redundant dirt	After cooling, cover the frame with hand to avoid water come inside, and clean the heating plat with a soft sponge and some detergent	
Cover	Clean with soft sponge and a little detergent	Do not use any thinner, benzene, detergent or chemical disposed towel: otherwise the surface will be damaged.
Automatic Temperature Controller	Clean with soft paper or dry soft towel	Do not clean the discreteness of the automatic temperature controller ,otherwise it will get an electric shock or be on fire
After cleaning the pizza pan, dry it carefully with a soft towel. After drying daub it with layer of cooking oil.		

SCHEMATIC DIAGRAM

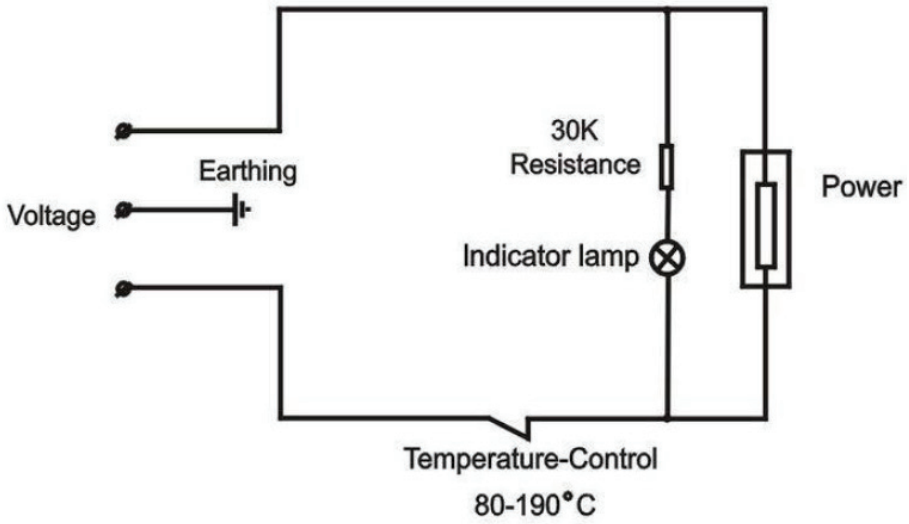

POWER: AC 220V 50Hz 1500W